



JLK
CABINETRY
— by JLK Designs —



— CABINET ASSEMBLY —
INSTRUCTIONS

— jlkcabinetry.com —

Base Cabinet

HARDWARE, TOOLS, AND STEP-BY-STEP ASSEMBLY INSTRUCTIONS FOR JLK CABINETRY BASE CABINETS.

REQUIRED PARTS



GLIDES
(2)



METAL BRACKETS
(4)



SCREWS
(VARIOUS)



SHELF CLIPS
(4)



GLIDE SUPPORTS
(2)

TOOLS NEEDED



POWER
DRILL



RUBBER
Mallet



WOOD
GLUE
(OPTIONAL)




NAIL
GUN
(OPTIONAL)



PHILLIPS
SCREWDRIVER



STAPLER
(OPTIONAL)

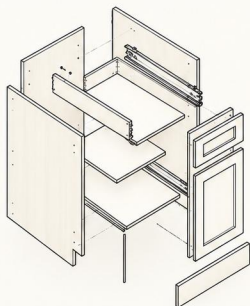

01 STEP 01



Attach the side panels to the bottom panel using screws.

02 STEP 02




Install the back panel and secure with screws.

03 STEP 03



Attach the top front and back stretchers.

04 STEP 04

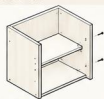

Install shelf clips and place the shelf.

05 STEP 05



Install drawer glides on both sides using screws.

06 STEP 06



Secure glide supports where required.

07 STEP 07



Attach the face frame and secure with screws.

08 STEP 08




Install the toe kick. Secure with screws or staples.

09 STEP 09



Assemble the drawer box (when applicable).

10 STEP 10

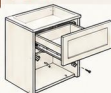

Install the drawer on the glides.

11 STEP 11



Attach the door(s) with hinges.

12 STEP 12



Final check — ensure all components are secure and aligned.

Base 3 Drawers

HARDWARE, TOOLS, AND STEP-BY-STEP ASSEMBLY INSTRUCTIONS FOR JLK CABINETRY BASE 3 DRAWERS.

REQUIRED PARTS



GLIDES
(6)



METAL BRACKETS
(4)



SCREWS
(VARIOUS)



SHELF CLIPS
(4)



GLIDE SUPPORTS
(6)

TOOLS NEEDED



POWER
DRILL



RUBBER
Mallet



WOOD
GLUE
(OPTIONAL)




NAIL
GUN
(OPTIONAL)



PHILLIPS
SCREWDRIVER



STAPLER
(OPTIONAL)

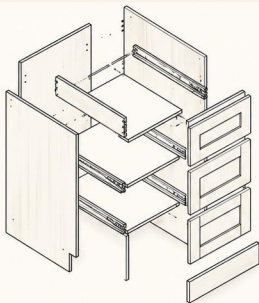

01 STEP 01



Attach side panels to the bottom panel using screws.

02 STEP 02



Install the back panel and secure with screws.

03 STEP 03



Attach the top front and back stretchers.

04 STEP 04



Install the drawer glides (3 sets) using screws. Ensure they are level.

05 STEP 05



Secure glide supports to the sides where required.

06 STEP 06



Assemble the three drawer boxes using screws (repeat for all 3).

07 STEP 07



Install drawer glides on both sides of each drawer box.

08 STEP 08



Install the bottom drawer box onto the glides.

09 STEP 09



Install the middle drawer box onto the glides.

10 STEP 10



Install the top drawer box onto the glides.

11 STEP 11



Attach the drawer fronts and secure with screws (from inside the drawer box).

12 STEP 12



Install the toe kick. Secure with screws or staples.

Blind Corner Base Cabinet

HARDWARE, TOOLS, AND STEP-BY-STEP ASSEMBLY INSTRUCTIONS FOR JLK CABINETRY BLIND CORNER BASE CABINETS.

REQUIRED PARTS



GLIDES
(2)



METAL BRACKETS
(6)




SCREWS
(VARIOUS)



SHELF CLIPS
(4)



GLIDE SUPPORTS
(2)

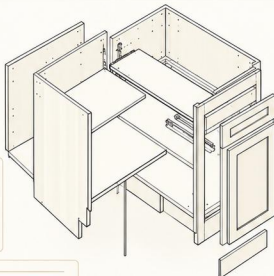

TOOLS NEEDED



POWER
DRILL



RUBBER
Mallet



WOOD
GLUE
(OPTIONAL)



NAIL
GUN
(OPTIONAL)



PHILLIPS
SCREWDRIVER



STAPLER
(OPTIONAL)

01 STEP 01



Attach the bottom panel to the side and back panels using screws.

02 STEP 02



Install the back panels and secure with screws.

03 STEP 03



Attach the front stretchers and top rails as shown.

04 STEP 04



Install the corner shelf and secure with shelf clips.

05 STEP 05



Install drawer glides on the front frame using screws.

06 STEP 06



Install glide supports on the inside panels where required.

07 STEP 07



Assemble the drawer box (from separate instructions).

08 STEP 08



Install the drawer box on the glides.

09 STEP 09



Attach the face frame and secure with screws.

10 STEP 10



Attach the door(s) with hinges. Adjust for proper alignment.

11 STEP 11



Install the toe kick. Secure with screws or staples.

12 STEP 12



Final check — ensure all components are secure and aligned.

Lazy Susan Cabinet

HARDWARE, TOOLS, AND STEP-BY-STEP ASSEMBLY INSTRUCTIONS
FOR JLK CABINETRY LAZY SUSAN BASE CABINETS.

REQUIRED PARTS



GLIDES
(2)



METAL BRACKETS
(4)



SCREWS
(VARIOUS)



SHELF CLIPS
(8)



LAZY SUSAN
HARDWARE SET
(1)

TOOLS NEEDED



POWER
DRILL



RUBBER
Mallet



WOOD
GLUE
(OPTIONAL)




NAIL
GUN
(OPTIONAL)




PHILLIPS
SCREWDRIVER



STAPLER
(OPTIONAL)

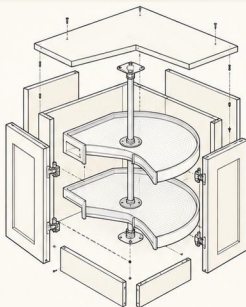

01 STEP 01

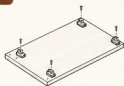

Attach glides to the bottom panel using screws.

02 STEP 02



Attach side panels to the bottom panel using screws.

03 STEP 03



Install the back panels and secure with screws and metal brackets.

04 STEP 04



Attach the top front, back stretchers and corner support.

05 STEP 05



Install the Lazy Susan center pole to the bottom panel.

06 STEP 06




Secure the top pole mount to the top panel.

07 STEP 07



Install the rotating shelves onto the center pole.

08 STEP 08

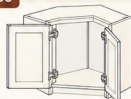


Attach the door(s) with hinges and adjust for proper alignment.

09 STEP 09




Install the toe kick. Secure with screws or staples.

10 STEP 10

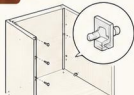

Install shelf clips if additional shelves are included.

11 STEP 11

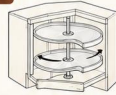

Test the Lazy Susan shelves for smooth rotation and adjust if needed.

12 STEP 12



Final check — ensure all components are secure and aligned.

Wall Cabinet

HARDWARE, TOOLS, AND STEP-BY-STEP ASSEMBLY INSTRUCTIONS
FOR JLK CABINETRY WALL CABINETS.

REQUIRED PARTS



GLIDES
(2)



METAL BRACKETS
(4)



SCREWS
(VARIOUS)



SHELF CLIPS
(4)



GLIDE SUPPORTS
(2)

TOOLS NEEDED



POWER
DRILL



RUBBER
Mallet



WOOD
GLUE
(OPTIONAL)




NAIL
GUN
(OPTIONAL)




PHILLIPS
SCREWDRIVER



STAPLER
(OPTIONAL)

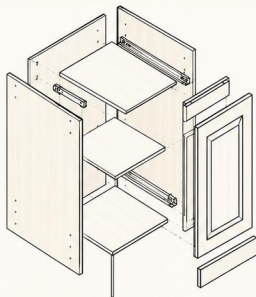

01 STEP 01

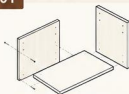

Attach side panels to the bottom panel using screws.

02 STEP 02



Install the back panel and secure with screws.

03 STEP 03



Attach the top panel and secure with screws.

04 STEP 04



Basic cabinet box completed.

05 STEP 05



Install cabinet glides on both sides using screws.

06 STEP 06



Install shelf clips and place the shelf.

07 STEP 07




Attach the face frame and secure with screws.

08 STEP 08



Attach the door(s) with hinges.

09 STEP 09

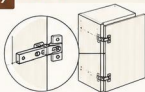

Adjust hinges for proper alignment.

10 STEP 10



Install any upper or lower trim pieces (if applicable).

11 STEP 11



Final check — ensure all components are secure and aligned.

Wall Diagonal Corner Cabinet

HARDWARE, TOOLS, AND STEP-BY-STEP ASSEMBLY INSTRUCTIONS FOR JLK CABINETRY WALL DIAGONAL CORNER CABINETS.

REQUIRED PARTS



GLIDES
(2)



METAL BRACKETS
(4)



SCREWS
(VARIOUS)



SHELF CLIPS
(4)



GLIDE SUPPORTS
(2)

TOOLS NEEDED



POWER
DRILL



RUBBER
MALLET



WOOD
GLUE
(OPTIONAL)




NAIL
GUN
(OPTIONAL)



PHILLIPS
SCREWDRIVER



STAPLER
(OPTIONAL)

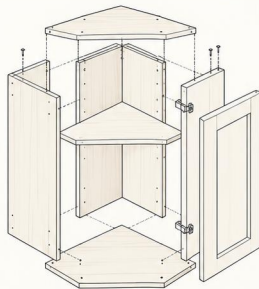

01 STEP 01



Attach the side panels to the bottom panel using screws.

02 STEP 02



Install the back panels and secure with screws.

03 STEP 03



Attach the top panel and secure with screws.

04 STEP 04



Verify the cabinet box is square and all connections are secure.

05 STEP 05



Install shelf clips at desired height on both sides.

06 STEP 06



Install the adjustable shelf onto the shelf clips.

07 STEP 07




Attach the face frame and secure with screws.

08 STEP 08



Attach the door with hinges and secure with screws.

09 STEP 09

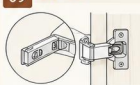

Adjust the hinges for proper alignment and door operation.

10 STEP 10



Install glide supports at the top as required.

11 STEP 11



Confirm shelf placement and door alignment.

12 STEP 12



Final check — ensure all components are secure and aligned.



JLK
CABINETRY
by JLK Designs

ASSEMBLY INSTRUCTIONS

QUALITY CABINETRY. TIMELESS SPACES.

Tall Pantry

HARDWARE, TOOLS, AND STEP-BY-STEP ASSEMBLY INSTRUCTIONS
FOR JLK CABINETRY TALL PANTRY CABINETS.

REQUIRED PARTS



GLIDES
(2)



METAL BRACKETS
(4)



SCREWS
(VARIOUS)



SHELF CLIPS
(VARIOUS)



GLIDE SUPPORTS
(2)

TOOLS NEEDED



POWER
DRILL



RUBBER
Mallet



WOOD
GLUE
(OPTIONAL)




NAIL
GUN
(OPTIONAL)



PHILLIPS
SCREWDRIVER



STAPLER
(OPTIONAL)

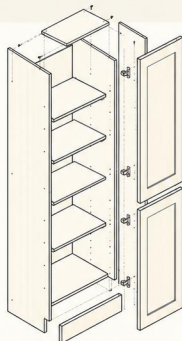


01 STEP 01



Attach the bottom panel to the side panels using screws.

02 STEP 02

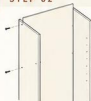


Install the back panel and secure with screws.

03 STEP 03



Attach the top panel and secure with screws.

04 STEP 04

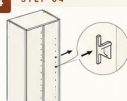

Install shelf clips at desired heights on both sides.

05 STEP 05



Place shelves onto the shelf clips.

06 STEP 06



Install the toe kick and secure with screws or staples.

07 STEP 07



Install glide supports where required and secure with screws.

08 STEP 08



Attach hinges to the door(s) as shown.

09 STEP 09



Attach the door(s) to the cabinet and secure with screws.

10 STEP 10



Adjust hinges for proper alignment and even gaps.

11 STEP 11



Install any handles or pulls and check all shelves for stability.

12 STEP 12



Final check — ensure all components are secure and aligned.

Oven Cabinet

HARDWARE, TOOLS, AND STEP-BY-STEP ASSEMBLY INSTRUCTIONS
FOR JLK CABINETRY OVEN CABINETS.

REQUIRED PARTS



GLIDES
(4)



METAL BRACKETS
(8)



SCREWS
(VARIOUS)



SHELF CLIPS
(4)



GLUE SUPPORTS
(4)

TOOLS NEEDED



POWER
DRILL



RUBBER
MALLET



WOOD GLUE
(OPTIONAL)




NAIL GUN
(OPTIONAL)



PHILLIPS
SCREWDRIVER



STAPLER
(OPTIONAL)

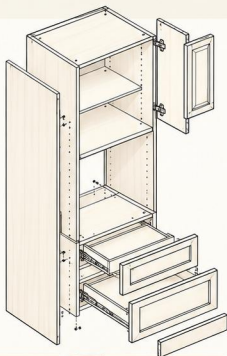

01 STEP 01



Attach side panels to the bottom panel using screws.

02 STEP 02



Install the back panel and secure with screws.

03 STEP 03



Attach the top panel and secure with screws.

04 STEP 04



Install shelf clips and place the upper shelf (if applicable).

05 STEP 05



Install horizontal support cleats for the oven opening at the recommended height.

06 STEP 06



Install drawer glides on both sides for the lower drawers using screws.

07 STEP 07




Attach the upper door with hinges.

08 STEP 08



Install the upper door and adjust for proper alignment.

09 STEP 09

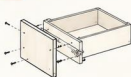

Assemble the drawer boxes and attach the drawer fronts.

10 STEP 10



Install the lower drawers on the glides.

11 STEP 11



Attach the toe kick.

12 STEP 12



Final check — ensure all components are secure and aligned.

Vanity Cabinet

HARDWARE, TOOLS, AND STEP-BY-STEP ASSEMBLY INSTRUCTIONS
FOR JLK CABINETRY VANITY CABINETS.

REQUIRED PARTS



GLIDES
(2)



METAL BRACKETS
(4)



SCREWS
(VARIOUS)



SHELF CLIPS
(4)



HINGES
(2)

TOOLS NEEDED



POWER
DRILL



RUBBER
MALLET



WOOD
GLUE
(OPTIONAL)




NAIL
GUN
(OPTIONAL)



PHILLIPS
SCREWDRIVER



STAPLER
(OPTIONAL)

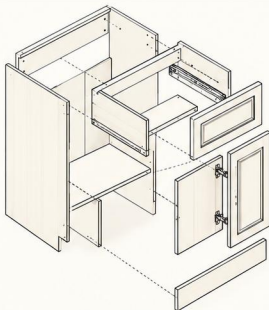

01 STEP 01



Attach side panels to the bottom panel using screws.

02 STEP 02



Install the back panel and secure with screws.

03 STEP 03



Attach the top front and back stretchers.

04 STEP 04



Install shelf clips and place the adjustable shelf (if applicable).

05 STEP 05



Install drawer glides on both sides using screws (where applicable).

06 STEP 06



Assemble the drawer box and attach the drawer front with screws.

07 STEP 07



Install the drawer on the glides and secure.

08 STEP 08



Attach the face frame and secure with screws (where applicable).

09 STEP 09



Install the door(s) with hinges.

10 STEP 10



Attach the drawer front and door(s), then adjust for proper alignment.

11 STEP 11



Install the toe kick. Secure with screws or staples.

12 STEP 12



Final check — ensure all components are secure and aligned.